



IMAGINE UAV

Installation Guide

Software version: 2.1 for IMAGINE 2022

Content

1	Prerequisites for installation:	2
2	Installation:	2
3	Offline activation of Agisoft Metashape License Key	8
4	Update De-/Installation	9
5	Licensing IMAGINE UAV:	10
5.1	Steps to retrieve the necessary HostID for UAV License	10
5.2	Adding the license	10

1 Prerequisites for installation:

1. ERDAS IMAGINE **2022** or Update 1 (installed and licensed)
2. IMAGINE UAV Installer (<https://www.geosystems.de/produkte/ imagine-uav/download>)
3. Agisoft License Key (existing or provided by GEOSYSTEMS)
4. IMAGINE UAV License Key (provided by GEOSYSTEMS)
5. **Internet connection** (otherwise continue with chapter 3 after installation)

Please note:

The standard version is licensed **standalone nodelocked**.

Please install and license on your workstation.


Retrieve the Host-ID before installing and send it to us / your local reseller.

When you have received the IMAGINE UAV license (and the Agisoft License Key), you can proceed with the installation.


For Licensing and retrieving Host-ID, please see Chapter 5, page 8.

2 Installation:


- a) **Start** the installer for IMAGINE UAV 2.1
- b) Select a **language**
- c) **Close** other applications, if open (i.e., **IMAGINE**)
- d) Agree license terms
- e) **Check all** boxes for a **new** installation:

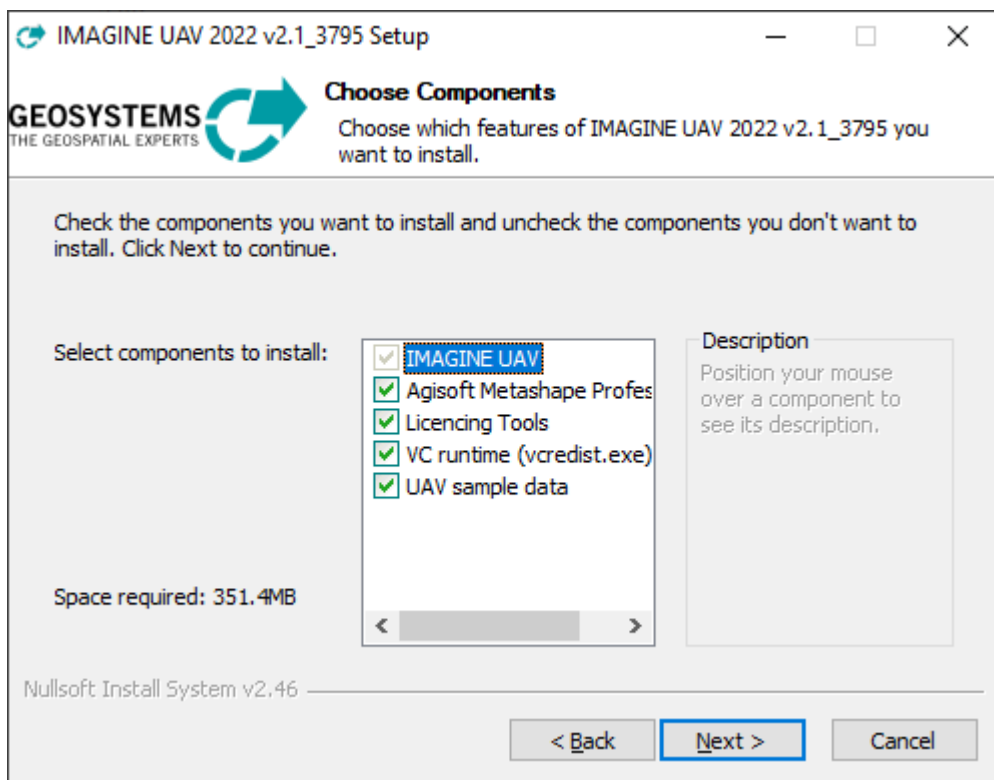


- f) Select which Agisoft you want to use:
 - a. The one, provided with this installer
 - b. Another version to be installed (separate installer is needed).
 - c. An already installed version (installation of 1.8 or higher is required)

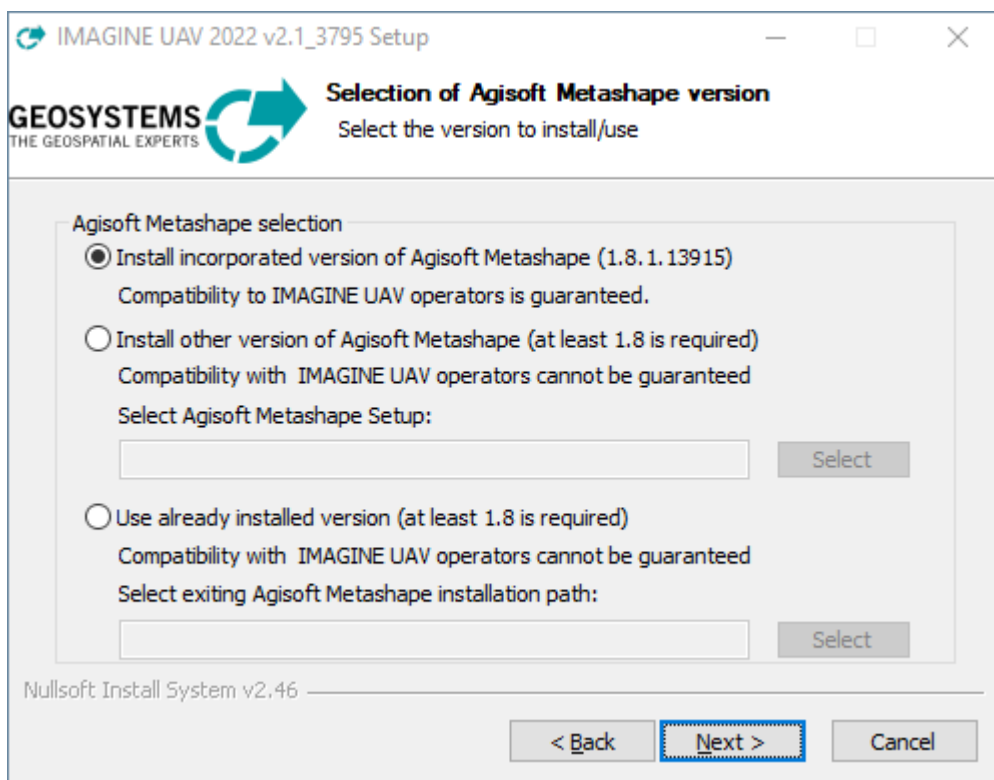


- g) Select **how to activate** your Agisoft Metashape
 - a. Enter Activation Key provided (new installation)
 - b. Choose this option for an existing installation of Metashape

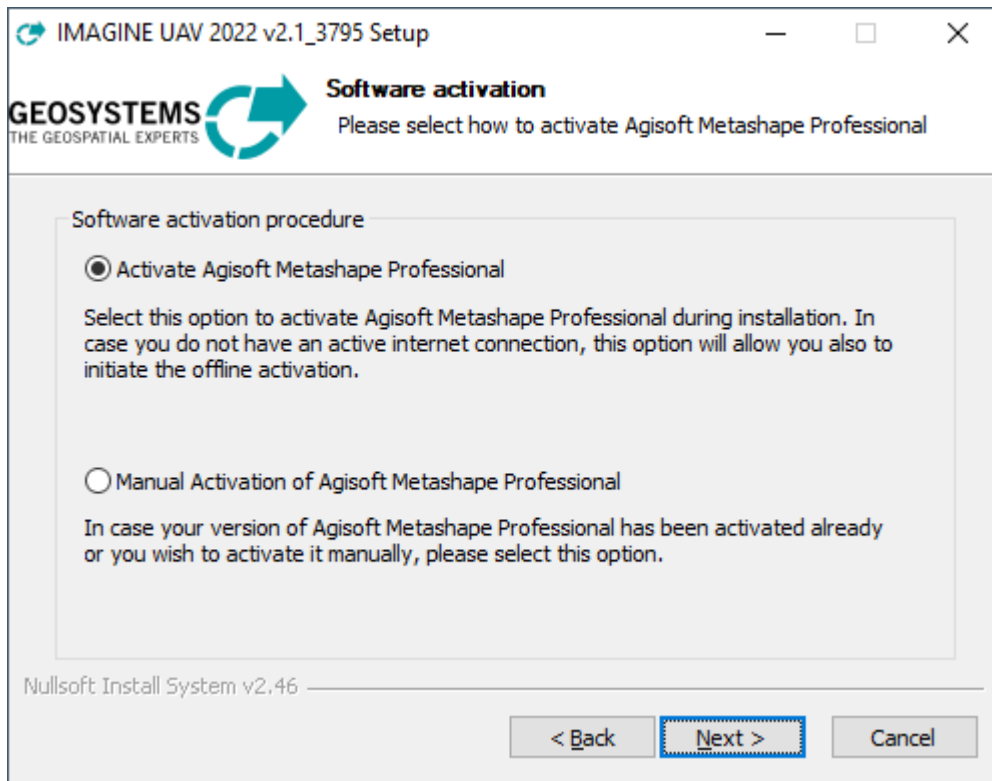

- h) Paste your Agisoft License key in the red field and continue:

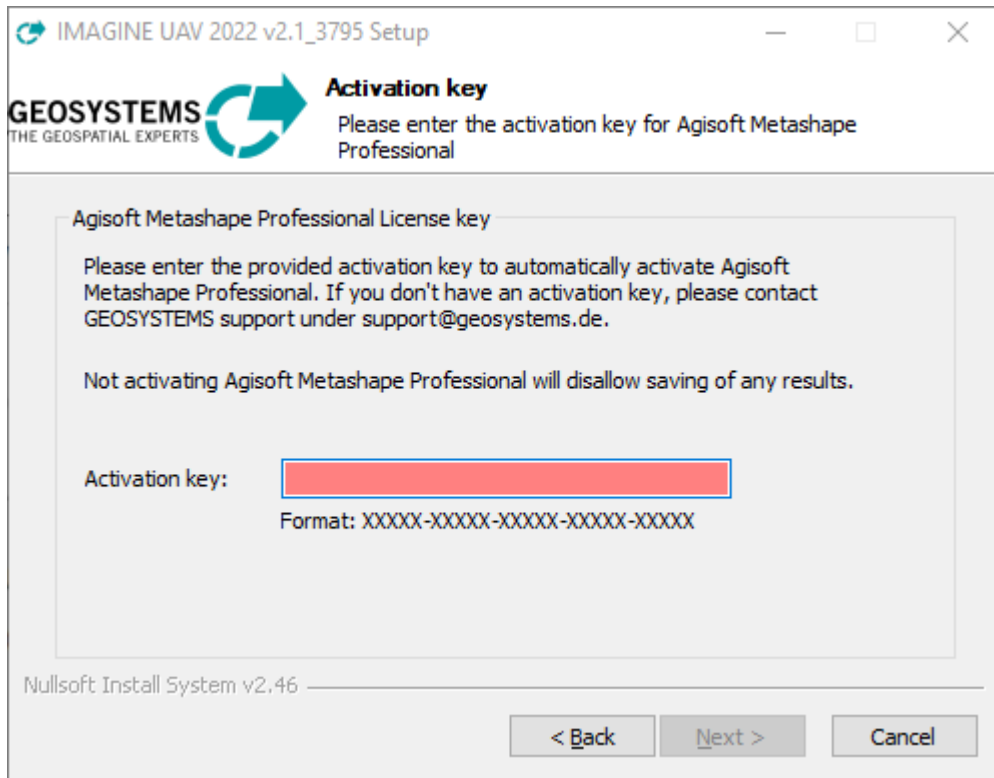

- i) Summary of necessary information: go on with **Install** to Install IMAGINE UAV

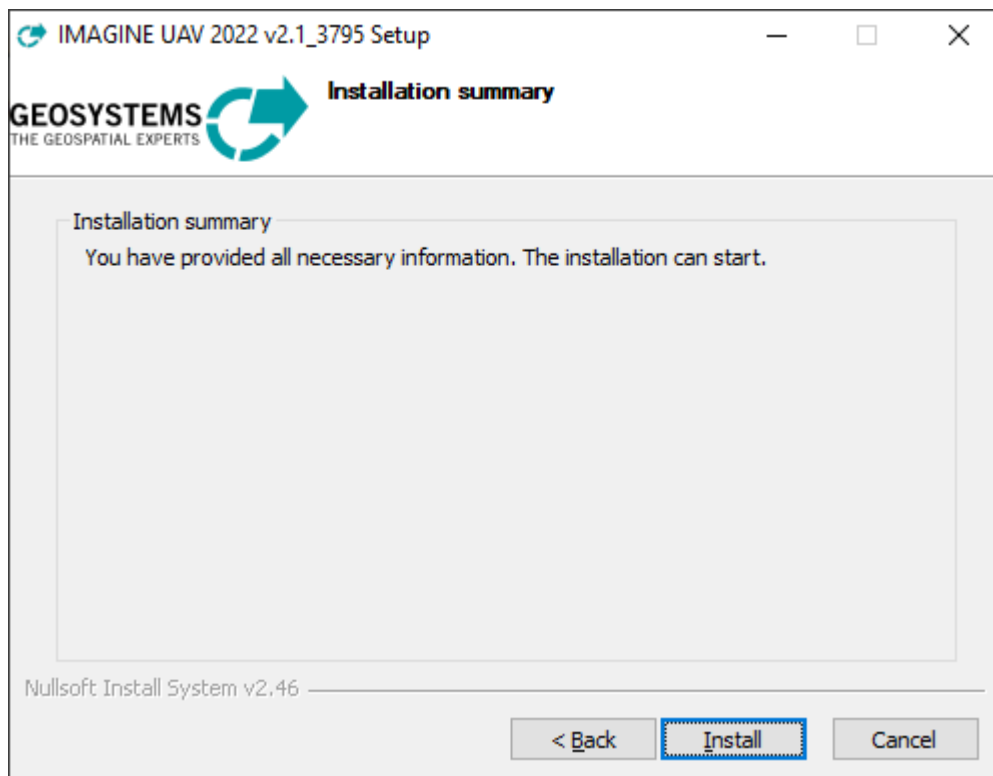


In the background **Agisoft Metashape is activated online.**


You will need an internet connection for this step.
After the activation no permanent online connection is needed.

If you are **not online** the following message will occur:

→ Proceed with chapter 3 Offline Activation

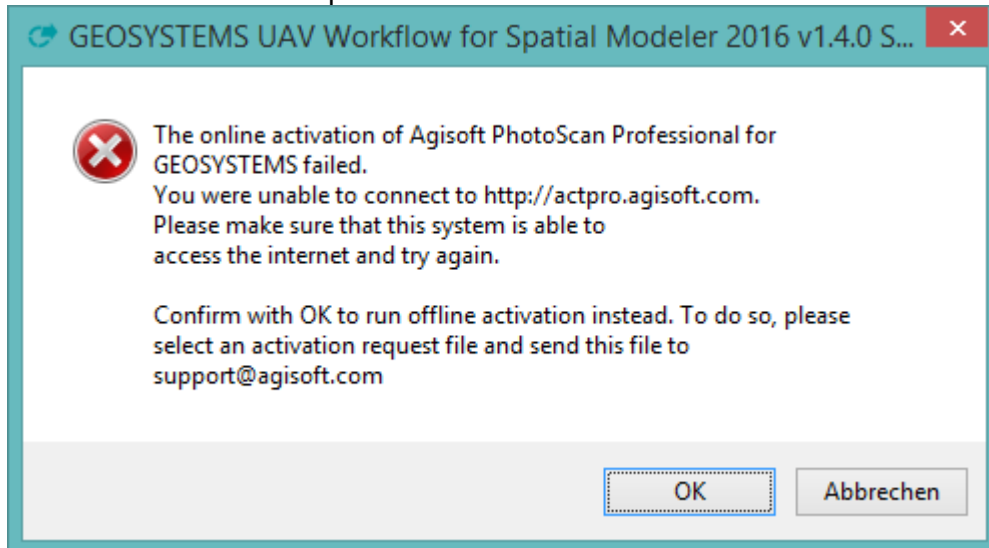


j) After successful installation and activation of the Metashape license:

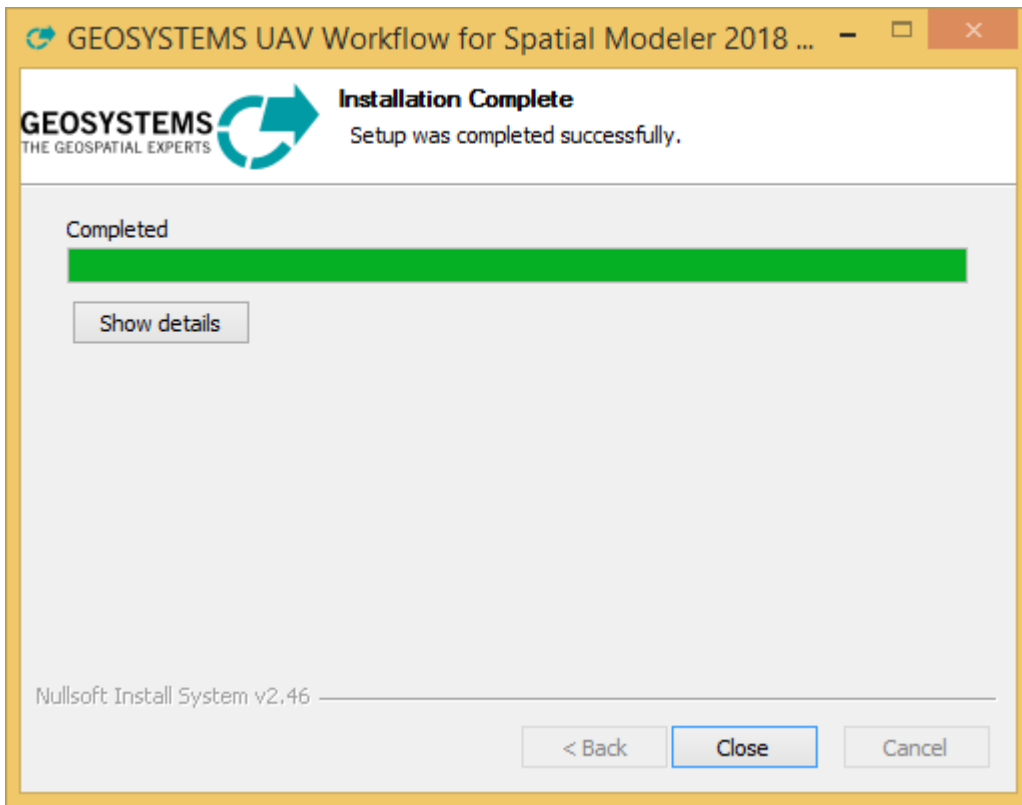


3 Offline activation of Agisoft Metashape License Key

a) Here you can start the **offline activation** of Agisoft.

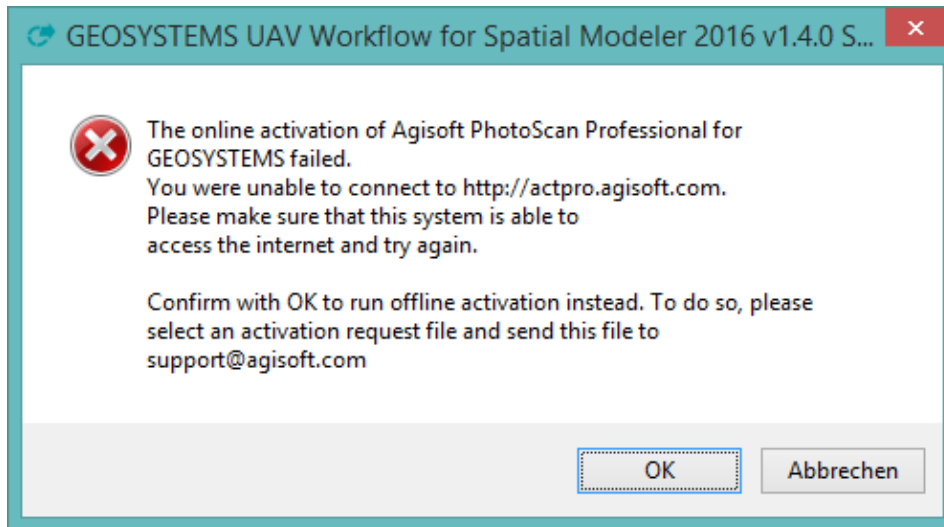

b) With **OK** save the Request file (*.act):

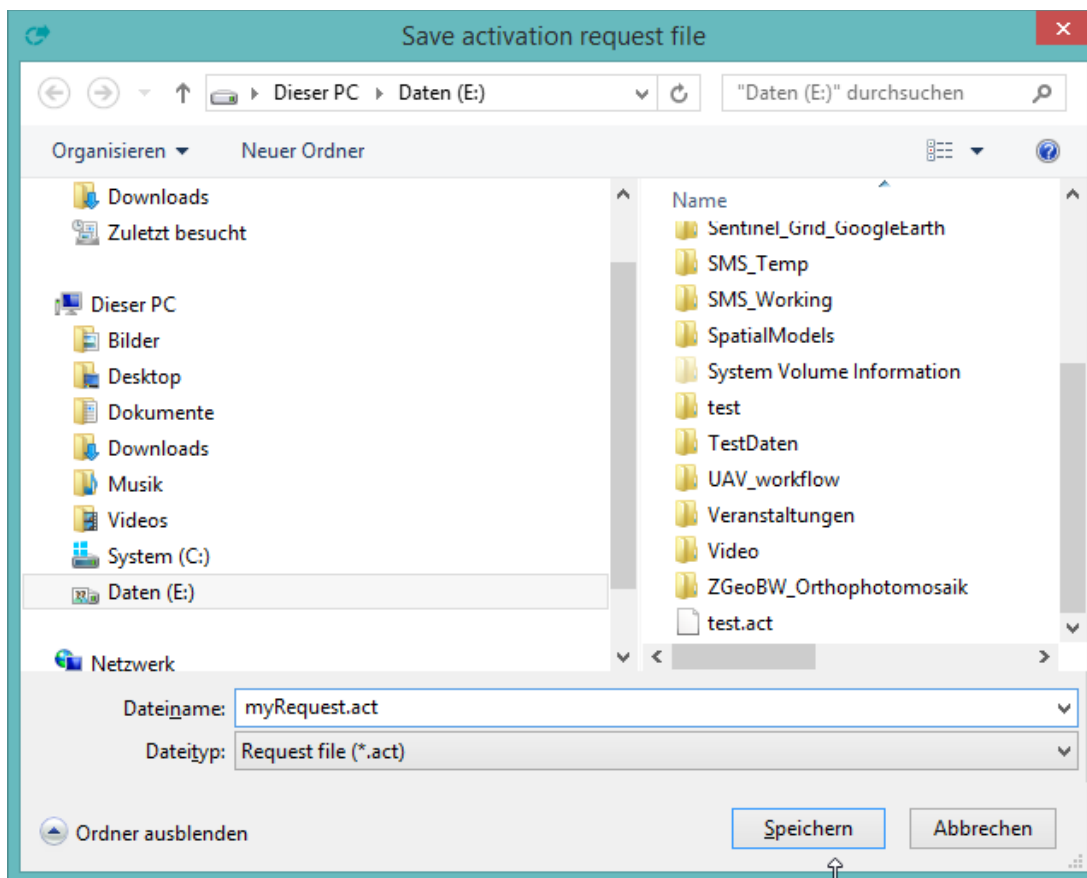


Alternatively, this can be done also from the command line using

```
--activate-offline key:
    metashape.exe --activate-offline 11111-22222-33333-44444-55555
"C:/request.act"
```

Here the license key as an argument should be used and path to the activation request file that should be saved.

- c) The activation request is saved.

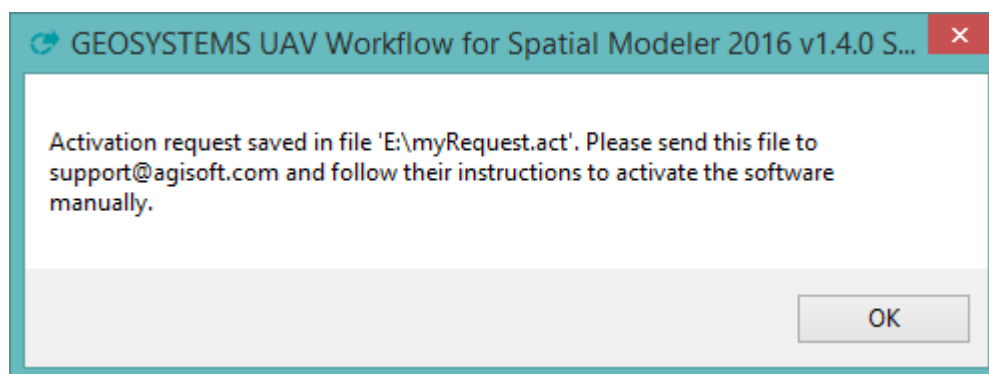

- d) Please do now send the *.act-file to us (keycode@geosystems.de) or to your local reseller. You will be provided with the necessary information to complete the offline activation of Metashape.


You will receive a *lic file which has to be saved into the installation path:

C:\Program Files\Agisoft\Metashape Pro

4 Update De-/Installation

If you do have an older Version installed on your system, please deactivate and remove it before installing the new one.

- a) **Deactivate Photoscan**

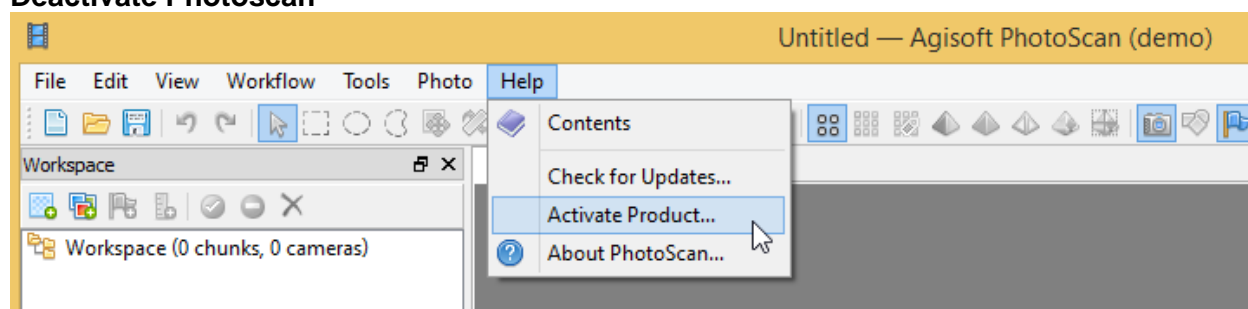


- b) **Stop GEOSYSTEMS License Service**
 c) **Deinstall IMAGINE UAV Workflow and Agisoft Metashape**
 under Program and Features
 d) **Install IMAGINE UAV** as described above
 (You may uncheck GEOSYSTEMS License Tools)

5 Licensing IMAGINE UAV:

5.1 Steps to retrieve the necessary HostID for UAV License

1. Install [GEOSYSTEMS License Tool](http://www.imagine-uav.com/download.html) (www.imagine-uav.com/download.html)
2. Start the GEOSYSTEMS License Tools and use the “**Get HostID**”-function to derive the Host-ID.

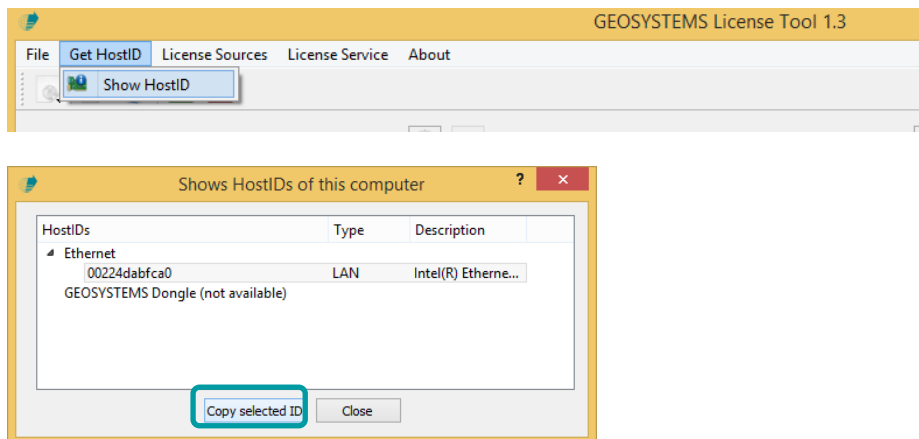


3. Use the ‘Copy selected ID’ Button and **submit the Host-ID** to us (keycode@geosystems.de) or your local reseller

Please use a LAN-ID, if possible.
Wireless-IDs do not exist, when the device is switched off.


4. The **UAV license will be send to you** together with AGISOFT-License-Key

5.2 Adding the license

When you have received your UAV License please load it with ‘Add Local License’:

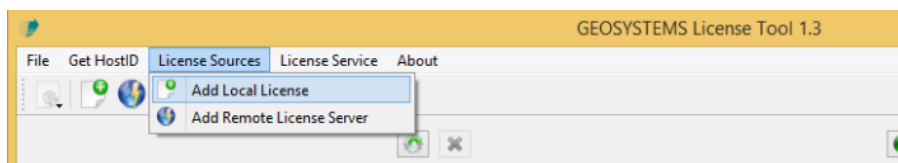

Finally, your correct License Tool should look like this (click on current license source and product to display):

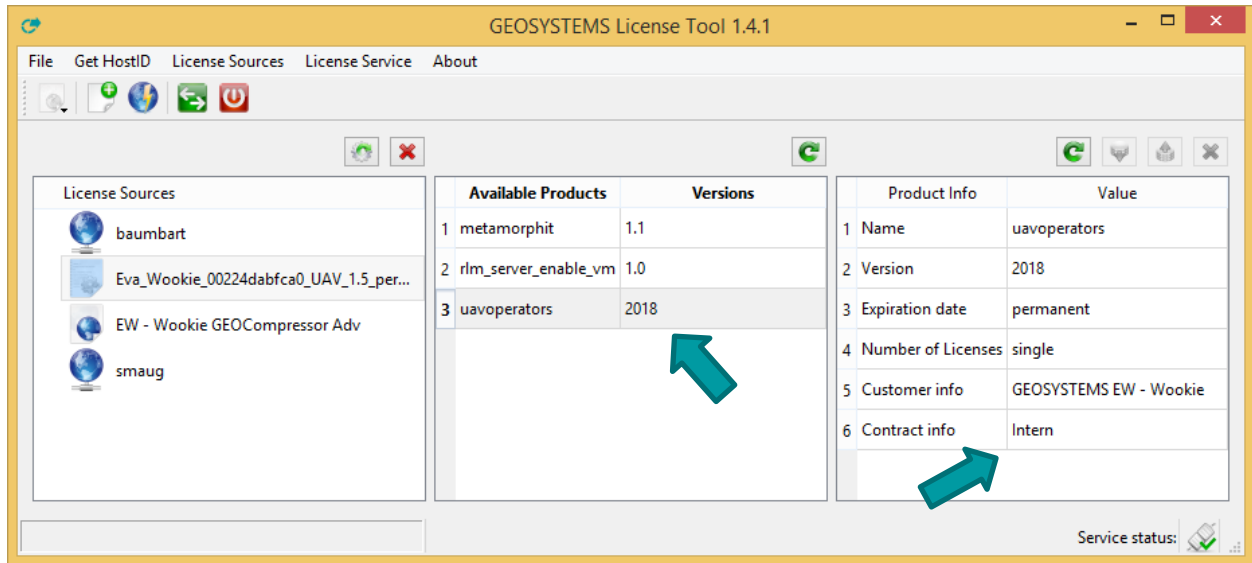

Contact:

GEOSYSTEMS GmbH
 Support-Team
 Riesstrasse 10
 82110 Germering
 GERMANY
 T: +49 89 894343-44
 E: support@geosystems.de
 www.geosystems.de